OPERATING INSTRUCTION FOR THE SPIT P560 TOOL with special adaptor (Pin Guide) for DIAPASON connector





Black cover button n° 24

1) Press the button (n° 24) to open the cover (n° 23)

2) Fully open the pin guide (n°1)

3) Place the disc in the housing

4) Close the cover (n° 23)

LOADING THE CARTRIDGES



Fully open the pin guide (n°1).

Hold the tool with the pin guide pointing vertically upwards. Insert the nail into the hole of the pin guide (head first). A magnet will keep the nail in the correct position.

Point the tool towards the ground. Now the tool is ready for firing.

Hold the tool and the connector perpendicular to the work surface, press firmly against the working surface and pull the trigger.

LOADING THE PINS




In order to reload the tool fully extract the pin guide and repeat the procedure. Each disc contains 10 cartridges

RELOADING

TECNARIA Spa http://www.tecnaria.com tel * 39 (0)424 502029 r.a. Technical assistance: Mr. Pavel

MAINTENANCE OF THE NAILER

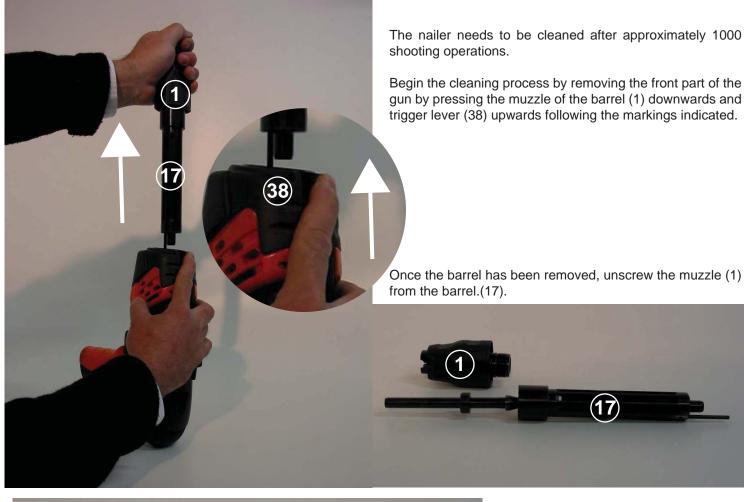



Clean all parts of the exterior of the barrel (17) with the metal brush (A), and the interior of the barrel (1) and the muzzle with the plastic brushes (B) and (C).

Control the condition of the piston (15) and shock absorber (14).

A spare piston(15) can be found inside the nailer box. A damaged or worn out piston (see photographs) must be replaced. There is also a spare shock absorber ring (14) inside the nailer box. This part must also be substituted if it is worn out as seen in the photograph. The white side of the shock absorber is placed towards the part of the piston which strikes the nails.



